

ROLLER BLINDS

FITTING INSTRUCTIONS


CLASSIC HEADRAIL
CHAIN CONTROL

greenlane
FURNISHINGS

The installation of this product should be conducted by someone competent in DIY. Please read the instructions before installing or operating this product. If in doubt, consult a professional.

Please take care when unpacking your blind, do not use a knife or any sharp object.

IN THE BOX

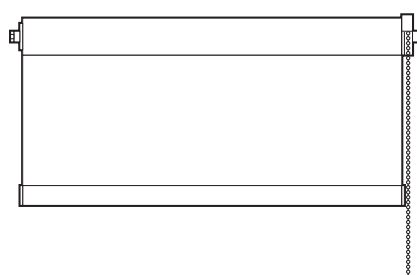

CLASSIC ROLLER BLIND
BRACKETS
SCREWS

TOOLS REQUIRED


DRILL
SCREWDRIVER
TAPE MEASURE
PENCIL
SPIRIT LEVEL

FITTING YOUR BLIND

Before you start, make sure the screws provided are suitable for your fitting surface. Some surfaces will require wall plugs or different screws to the ones we provide.


Ensure you position the brackets a suitable distance away from any obstructions such as window handles to ensure your product operates smoothly.

STEP 1 - MEASURE

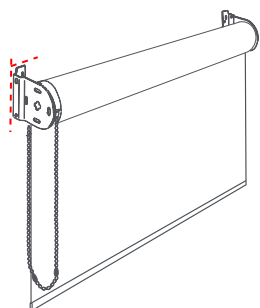


Connect the brackets to the roller blind. Decide if you are face or top fixing. Hold your blind up to the fitting surface, positioning it where you will fit it. Mark the bracket locations on the wall with a pencil.

STEP 2 - FIX THE BRACKETS

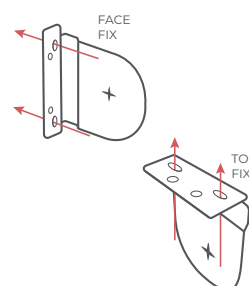


Remove the brackets from the blind. Hold them to the marks made in step 1. Mark the positions of the relevant holes on the wall with a pencil. Drill your holes and fit the brackets with suitable plugs and screws.

STEP 3 - PLUNGE AND CLICK

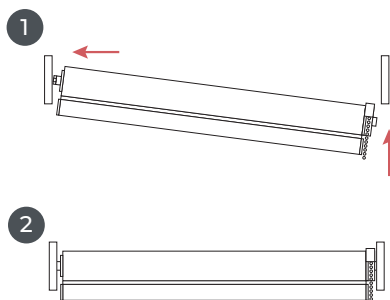


To fit your blind, push the non-control end into the bracket. The plunger will depress with gentle force, allowing you to guide the control end into the other bracket, which should click in place.

STEP 4 - FIX THE P-CLIP

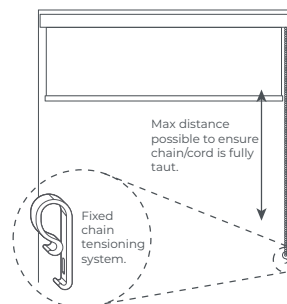


Make sure the chain is inside the P-Clip and screw it into the wall, ensuring that it is installed at the maximum distance possible from the control mechanism to ensure the chain remains taut.

OPERATING YOUR BLIND

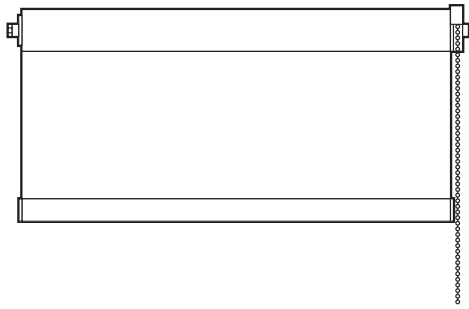

Pull the chain to raise and lower the blind. Do not continue pulling when the blind is fully retracted as you will damage it.

REMOVING YOUR BLIND

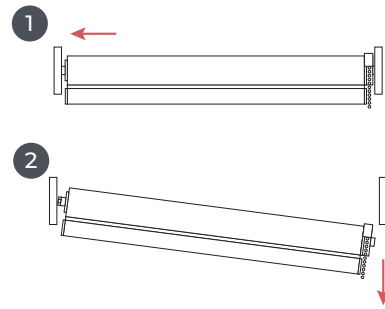

Push the blind towards the non-control end, the plunger will depress with gentle force, allowing you to guide the control end out of the bracket.

MAINTENANCE

The product is maintenance free, however we recommend checking your product regularly to ensure no components have been damaged and that your blind operates smoothly.

To clean your blind: use a dry lint free cloth to wipe over the fabric of the blind.

WARNING

Young children can be strangled by loops in pull cords, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

