

ROMAN BLINDS

FITTING INSTRUCTIONS


CASSETTE HEADRAIL
CHAIN CONTROL

greenlane
FURNISHINGS

The installation of this product should be conducted by someone competent in DIY. Please read the instructions before installing or operating this product. If in doubt, consult a professional.

Please take care when unpacking your blind, do not use a knife or any sharp object.

IN THE BOX

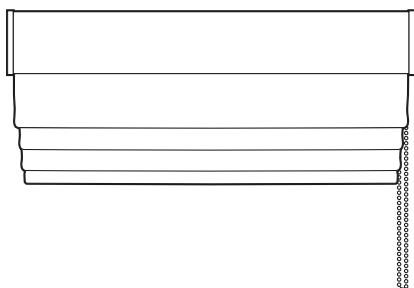

CASSETTE ROMAN BLIND
BRACKETS
SCREWS

TOOLS REQUIRED


DRILL
SCREWDRIVER
TAPE MEASURE
PENCIL
SPIRIT LEVEL

FITTING YOUR BLIND

Before you start, make sure the screws provided are suitable for your fitting surface. Some surfaces will require wall plugs or different screws to the ones we provide.


Ensure you position the brackets a suitable distance away from any obstructions such as window handles to ensure your product operates smoothly.

STEP 1 - MEASURE

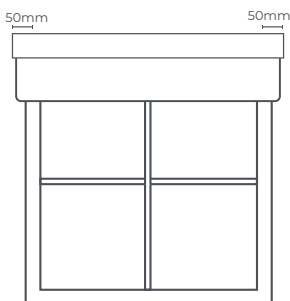


The brackets should be positioned at least 50mm in from each side of the blind. Hold your blind in place and, using your tape measure, mark these points with a pencil. Evenly space additional brackets between these two end brackets.

STEP 2 - FIX THE BRACKETS

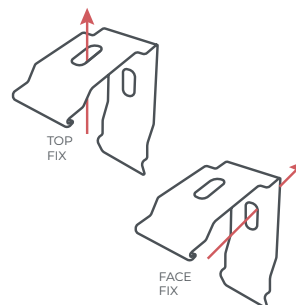


Choose whether you need to fit your brackets via top fix or face fix. Hold the brackets up to the pencil marks in the previous step. Mark the relevant hole with a pencil. Drill the holes and fit the brackets with suitable screws. Check your brackets are level.

STEP 3 - HOOK, TILT, CLICK

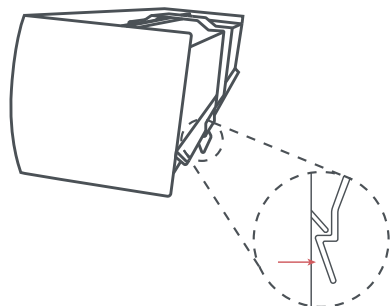


When the brackets have been fitted, hook the ridge on the top of the headrail into the front of the brackets then push and tilt the headrail back until it clicks into the back part of the bracket.

STEP 4 - FIX THE P-CLIP

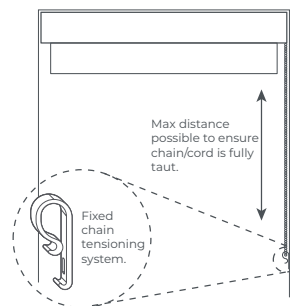


Make sure the chain is inside the P-Clip and screw it into the wall, ensuring that it is installed at the maximum distance possible from the control mechanism to ensure the chain remains taut.

OPERATING YOUR BLIND

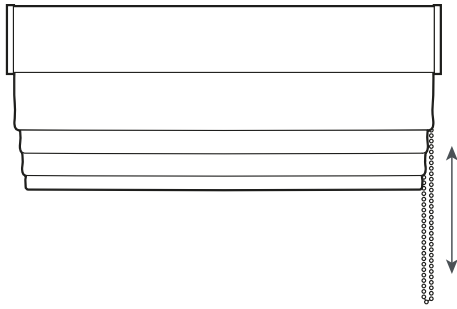

Pull the chain to raise and lower the blind. Do not continue pulling when the blind is fully retracted as you will damage it.

REMOVING YOUR BLIND

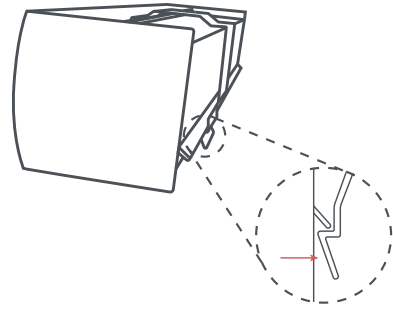

Push the release tab at the bottom of all the brackets to unclip the blind. Tilt the cassette backwards and ease out of the brackets.

MAINTENANCE


The product is maintenance free, however we recommend checking your product regularly to ensure no components have been damaged and that your blind operates smoothly.

To clean your blind: use a dry lint free cloth to wipe over the fabric of the blind. This product can be dry cleaned by detaching from the headrail, removing the back clips and rods. This is done at the customers' discretion and we bear no responsibility for any damage caused.

CHILD SAFETY

The cords on the back of the blind are connected to breakaway clips which disconnect when weight is put on the cords. If they disconnect, you can push the clips back on to reconnect.

All looped chain products are supplied with a child safety P-Clip. Step 4 must be followed correctly to ensure your blind remains child safe.

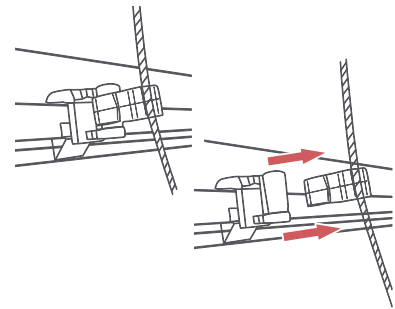

WARNING

Young children can be strangled by loops in pull cords, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

