

CURTAINS

FITTING INSTRUCTIONS


WAVE HEADING

greenlane
FURNISHINGS

The installation of this product should be conducted by someone competent in DIY. Please read the instructions before installing or operating this product. If in doubt, consult a professional.

Please take care when unpacking your blind, do not use a knife or any sharp object.

IN THE BOX

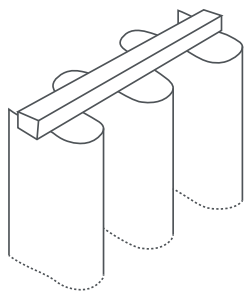

WAVE CURTAIN
CURTAIN TRACK*
BRACKETS
SCREWS

*IF THE TRACK HAS BEEN
ORDERED AS PART OF THE
CURTAIN.

TOOLS REQUIRED

DRILL
SCREWDRIVER
TAPE MEASURE
PENCIL
SPIRIT LEVEL


FITTING YOUR CURTAIN TRACK

Before you start, make sure the screws provided are suitable for your fitting surface. Some surfaces will require wall plugs or different screws to the ones we provide.

Ensure you position the brackets a suitable distance away from any obstructions such as window handles to ensure your product operates smoothly.


POSITIONING FOR OUTSIDE THE RECESS

STEP 1 - CURTAIN HEIGHT

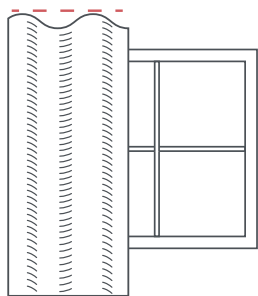


Hold one curtain up to the window to establish the top and bottom position of the curtain. Use a pencil to mark the top of curtain on the wall. Place the curtain neatly to one side.

STEP 2 - TRACK POSITION

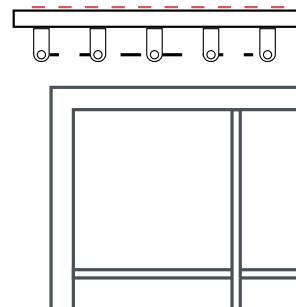


Position the track against the wall so the hole in the carrier is level with the marks in Step 1. Mark the top of the track and use a spirit level to mark a straight line across your wall. You will fit your brackets along this line.

STEP 3 - BRACKET POSITIONS

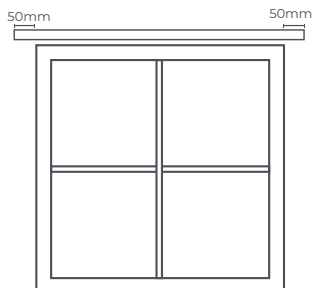

The brackets need to be positioned 50mm in from each side of the track. Using your tape measure, measure and mark these points with a pencil. Additional brackets should be spaced evenly between the two ends.


STEP 4 - FIX THE BRACKETS

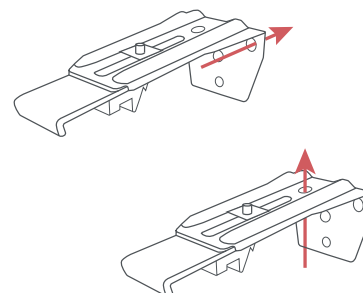

It is recommended to fit your brackets into your wall via a face fixing. Hold the brackets to the pencil marks in Step 3. Mark the relevant hole with a pencil. Drill the holes and use suitable fixings to fix the brackets.


POSITIONING FOR INSIDE THE RECESS

STEP 1 - MEASURE

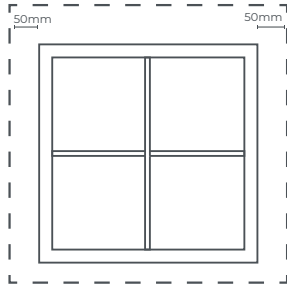

The brackets should be positioned 50mm in from each side of your recess. Using your tape measure, mark these points with a pencil. Evenly space additional brackets between the two end points.


STEP 2 - FIX BRACKETS

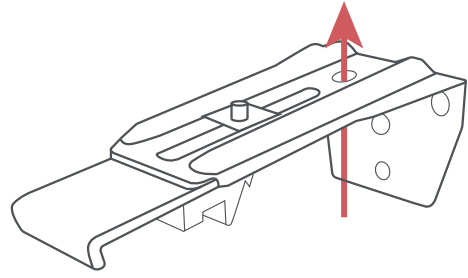

To fit inside the recess you will need to top fix the brackets. Hold the brackets to the marks made in Step 1 and mark the relevant hole with a pencil. Drill the holes and use suitable fixings to fix the brackets in place.


FITTING YOUR TRACK AND CURTAIN

STEP 1 - FITTING THE TRACK

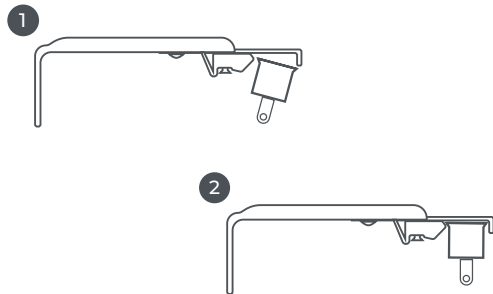

Unscrew the gold screw underneath the bracket slightly to allow the cantilever to slide back and forth. Angle the track into the bracket and push into the cantilever. The track should snap into position. Tighten the gold screw to hold the track in place.

STEP 2 - FITTING YOUR CURTAIN

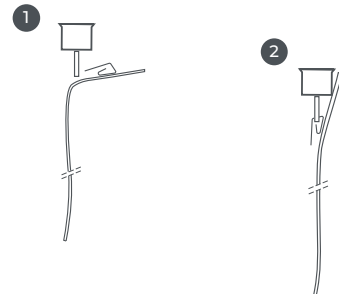

Make sure the runners are spread out along the track. Starting from the outermost hook, slide the hooks that are attached to the curtain tape onto the runners.

MAINTENANCE

When your curtains are first hung, use a steamer or steam setting on your iron to gently steam out any creases in the fabric. Be very careful not to touch the fabric while doing this. We recommend you tie back your curtains for 48 hours to suitably dress your curtains.

Dry clean only.

WARNING

Young children can be strangled by loops in pull cords, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

